 



 
 


 






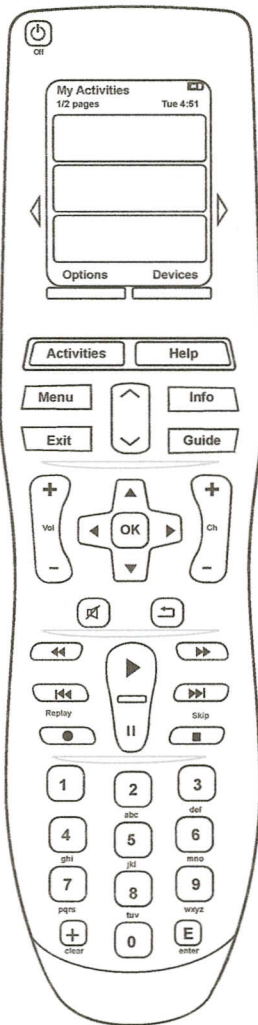

 




The buttons on your Harmony One

The Harmony One's buttons may have different functions or control different devices depending on which Activity you're in. For more information, see [Changing how buttons work in an Activity](#).



	The system off button turns off all the devices in the current Activity.
	The arrow keys help you page through items on the touch screen.
	The function buttons are dynamic and select different functions on the remote or the Activity.
	The Activities button returns you to the Activities starting point.
	The Help button starts the on-remote help.
	The Menu button opens the on-screen menu for the device selected. For information on selecting devices, see
	The page up and page down arrows help you navigate through your on-screen guide or menu.
	The Info button opens the information section of your on-screen guide.
	The Exit button closes your on-screen menu or guide.
	The Guide button opens your on-screen guide.
	The volume button changes the volume.
	The navigation pad arrows allow you to move through menus or on-screen guides.
	The channel button changes the channels.
	The mute button mutes the sound.
	The previous channel buttons returns you to the last channel you were on.
	The play area puts your play, pause, skip and other buttons in one area for quick access.
	The number pad has the digits 0-9.
	The enter button enters a selection from the number pad.
	The clear button clears an entry from the number pad.